


Operating Aquarium Car / Action Car

To replace the rollers follow the instructions below:

- 1) Remove the 4 screws and carefully remove the body.

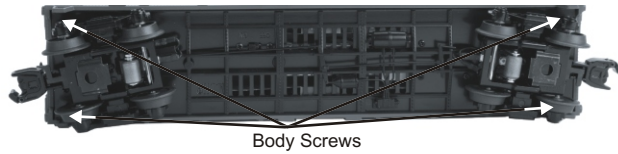


- 2) Disconnect the 2-pin connector at the top of the car.



- 3) Carefully remove the film Strip.




- 4) Remove the old roller (keep the washer)

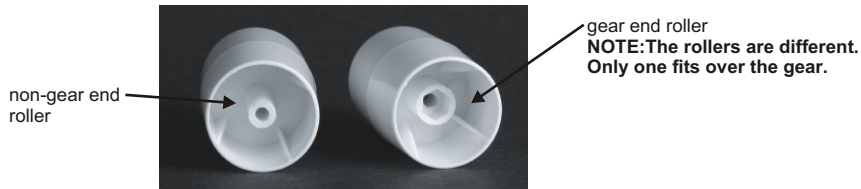

- 5) Apply the new roller over the pin at the correct location.
- 6) Place the washer onto the pin and push it down.
- 7) Reassemble in reverse order.


** (When reassembling be sure that the roller pins go into the guides in the body. You can line the pins up with the guides by looking through the portal windows on the ends of the car.)

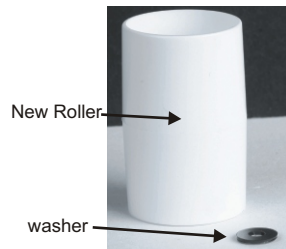

Operating Aquarium Car / Action Car

To replace the rollers follow the instructions below:

- 1) Remove the 4 screws and carefully remove the body.

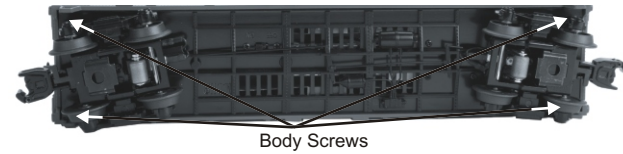


- 2) Disconnect the 2-pin connector at the top of the car.



- 3) Carefully remove the film Strip.



- 4) Remove the old roller (keep the washer)

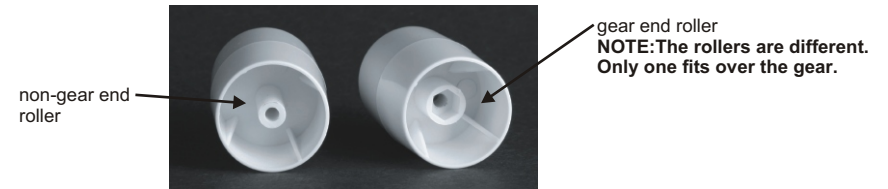

- 5) Apply the new roller over the pin at the correct location.
- 6) Place the washer onto the pin and push it down.
- 7) Reassemble in reverse order.

** (When reassembling be sure that the roller pins go into the guides in the body. You can line the pins up with the guides by looking through the portal windows on the ends of the car.)

